

NEED SUPPORT? EMAIL US AT SERVICE@DELTACYCLE.COM ISSUES SPEEDILY RESOLVED

see <http://theartofstorage.com/Utility-Hooks/single-utility-hook> for video

- 1) Identify where wooden stud lies within wall.
- 2) Drill pilot holes for wood screws (must be in wooden stud).
Fully Tighten both screws
(screws should be in center of wall stud).


Tool(s) Required



Phillips Head Screwdriver



Hand Drill

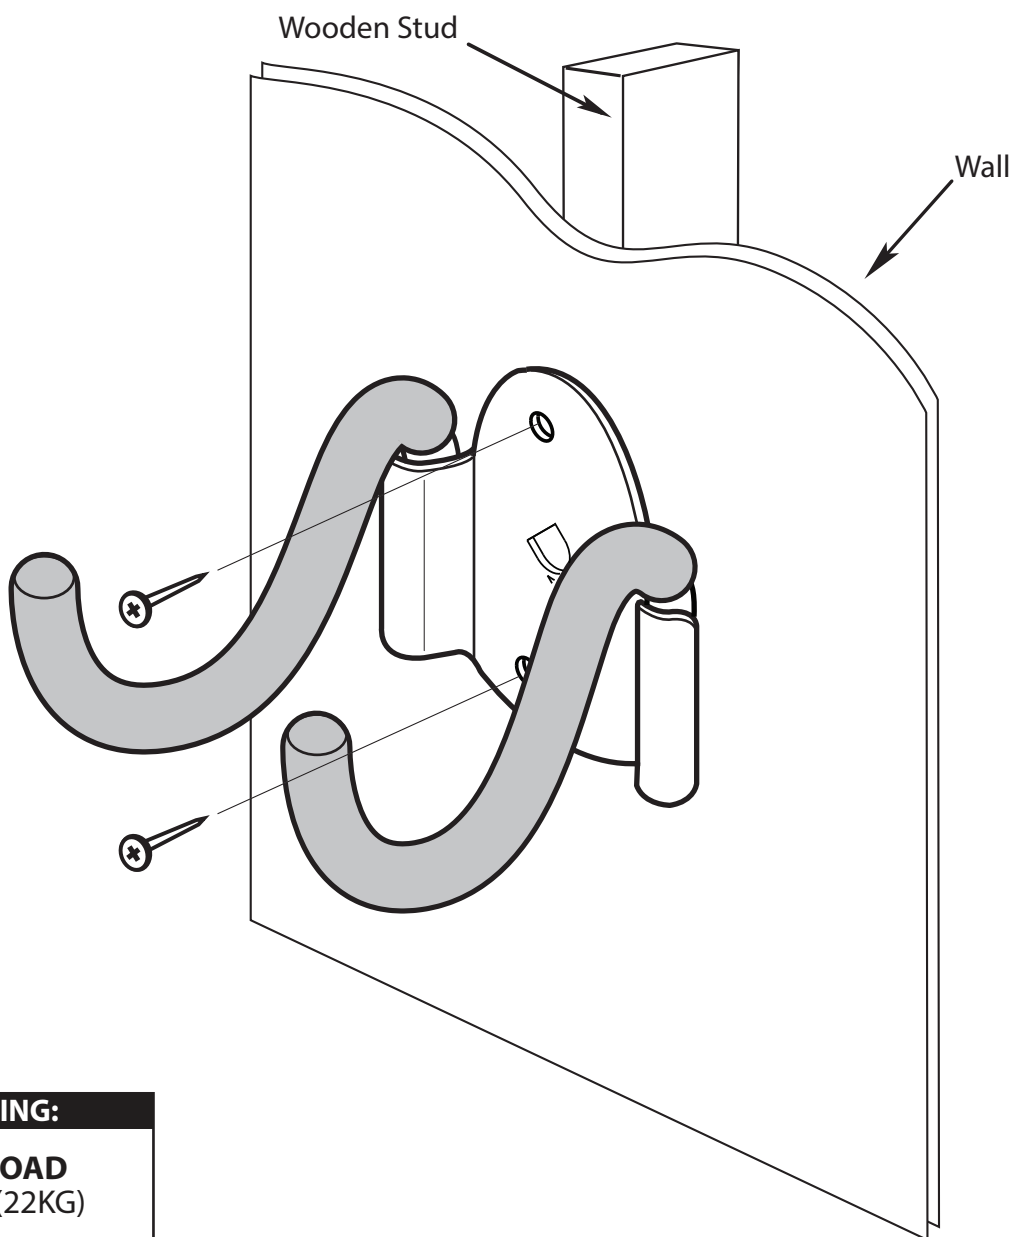

WARNING:

MAX LOAD
50 LBS (22KG)
TO AVOID INJURY,
DO NOT OVERLOAD



the art of storage™

Delta Design Company
36 York Avenue
Phone: 800 - 474 - 6615
Randolph, MA 02368 USA

THE VERMEER
SINGLE HOOK UTILITY HOLDER
UH3000
ASSEMBLY DIAGRAM

© Copyright 2016